

## Testing 3 Phase Extension Leads with the TnT Portable Appliance Tester Range

## <u>Equipment</u>











## <u>Instructions</u>

- Connect Alligator Lead into IEC Socket of your TnT Tester
- 2. Insert the metal pin into the Alligator Clip
- 3. Insert the 3 Phase Adapter 3 pin plug into the Appliance Socket of your TnT Tester
- 4. Connect the male plug of the Extension Lead to the 3 Phase Adapter
- 5. Insert the Metal Pin into the Earth socket of the female end of the Extension Lead as shown take care to ensure you have the correct socket
- 6. Select Extension Lead Test from the Main Menu of the TnT Tester to begin the test











6.

